



# Measure lining with double kink For single linings, twin linings and combinations



Die Premium Marke  
in Europa 

# Measure lining with double kink

## 1. Measure length (inside dimension):



Place the metre rule on the inner edge of the roof window groove.



Measure the length to the inside edge of the opposite groove (inside dimension).



# Measure lining with double kink


## 2. Measure width (inside dimension):



Place the metre rule on the inner edge of the roof window groove as before.



Measure the width to the inside edge of the opposite groove (inside dimension).

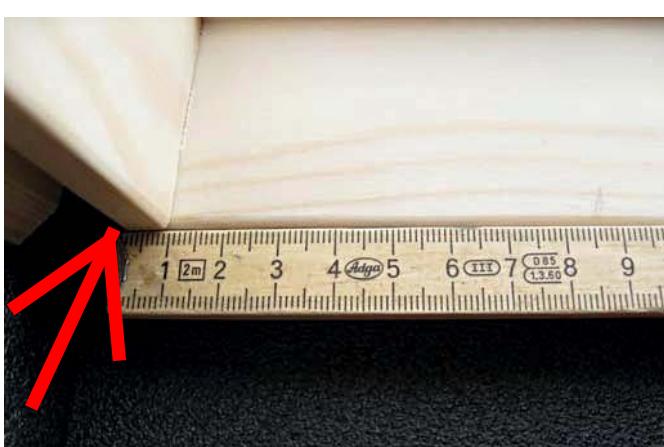

# Measure lining with double kink

## 3. Measure the lining depth:



Measure the depth of the lining at all 4 corners up to the ceiling.

For different depths, measure the average.

To compensate for unevenness on the ceiling, subtract approx. 4 mm in the groove from the total lining depth.


Top right



Top left



Lower right

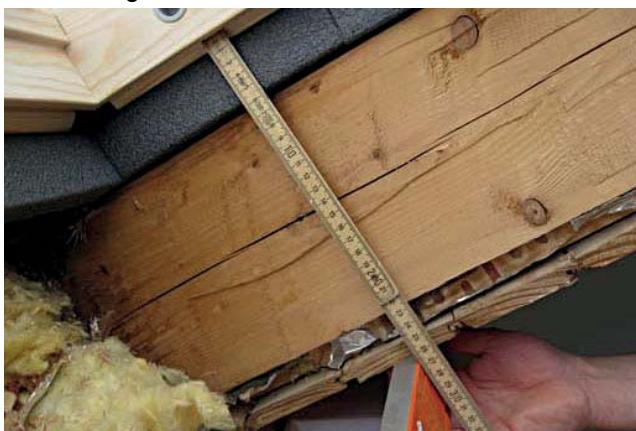

Lower left



# Measure lining with double kink

## 4. Measure kink at the top and kink depth:



Adjust the angle measuring tool on the roof window frame so that the cover frame covers the top sufficiently. It is advisable to draw a **marking line** on the rafter or on the insulation foil. Then measure the **plumb angle** at the top.




Measure the **upper tilt angle** (usually 90 degrees) and the **kink depth** with the metre rule.




Measure the **kink depth** incl. groove depth. The measurement gives the depth of the kink on the **visible side inside!**

# Measure lining with double kink


## 5. Measure kink at the bottom and kink depth:

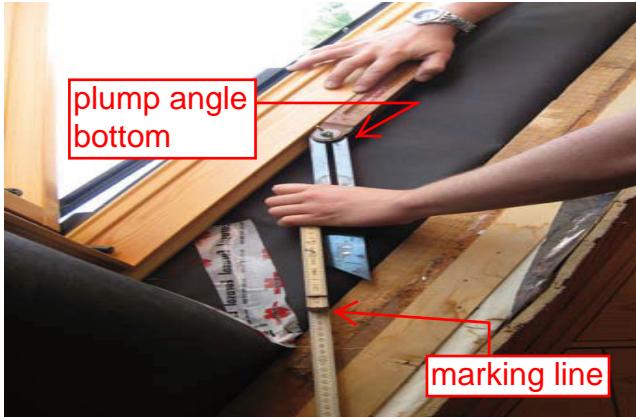

Adjust the angle measuring tool on the roof window frame so that the cover frame covers the bottom sufficiently. It is advisable to draw a **marking line** on the rafter or on the insulation foil. Then measure the **plumb angle bottom**.

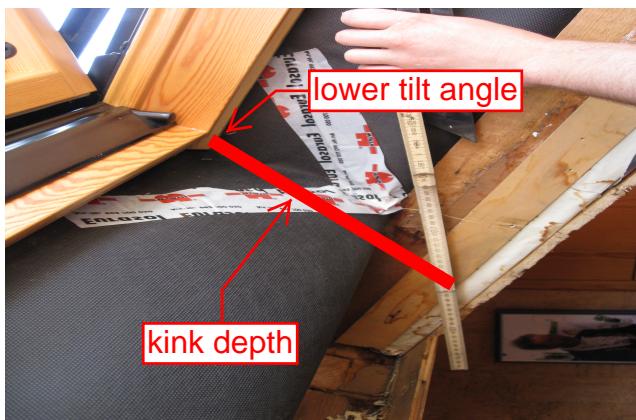

Measure the **lower tilt angle** (usually 90 degrees) and the **kink depth** with the metre rule.

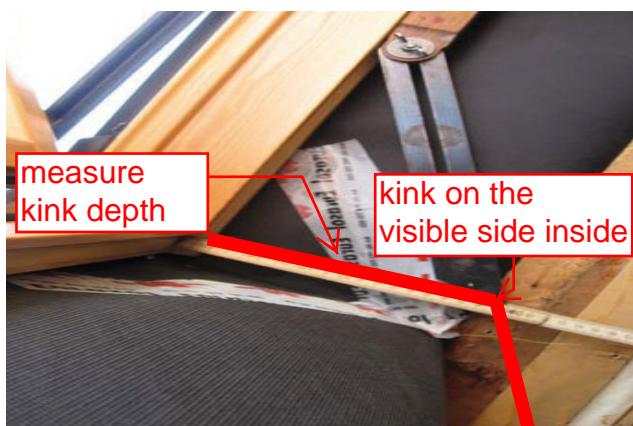


Measure the **kink depth** incl. groove depth. The measurement gives the depth of the kink on the **visible side inside!**

# Measure lining with double kink

## 6. Measure the width of the cover frame:



Place a spirit level or an angle measuring tool at 90 degrees to the roof window on the inside edge of the roof window groove.

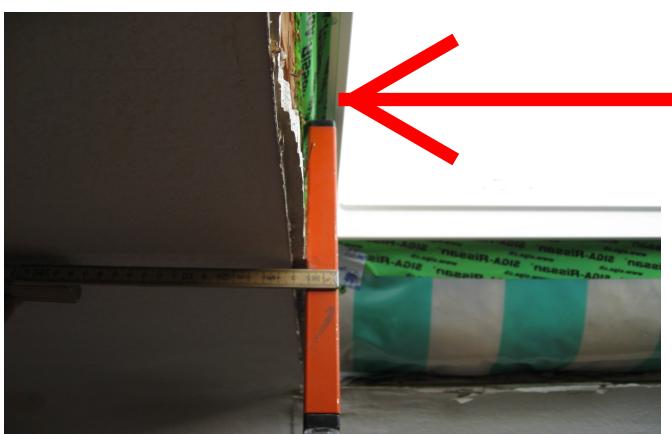

Then measure the frame width from the inner edge of the roof window groove with the metre rule.



The standard widths of our cover frames are 65, 80 and 100 mm.

Special widths up to 250 mm are possible.