



Measure lining with kink at the top


For single linings, twin linings and combinations



Die **Premium** Marke
in Europa 

Measure lining with kink at the top

1. Measure length (inside dimension):

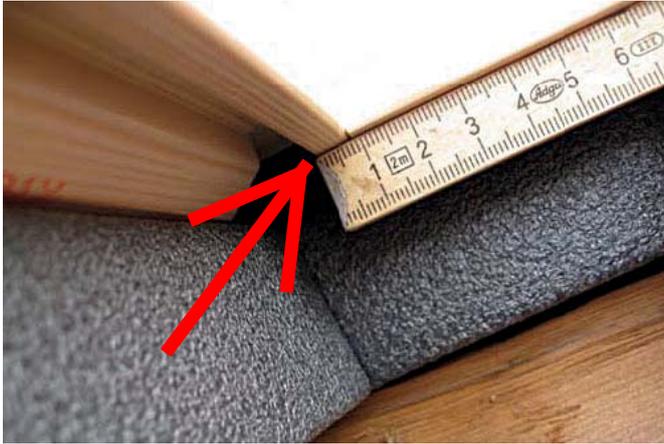

Place the metre rule on the inner edge of the roof window groove.



Measure the length to the inside edge of the opposite groove (inside dimension).



Measure lining with kink at the top

2. Measure width (inside dimension):



Place the metre rule on the inner edge of the roof window groove as before.



Measure the width to the inside edge of the opposite groove (inside dimension).



Measure lining with kink at the top

3. Measure the lining depth:



Measure the depth of the lining at all 4 corners up to the ceiling.

For different depths, measure the average.

To compensate for unevenness on the ceiling, subtract approx. 4 mm in the groove from the total lining depth.

Top right



Top left



Lower right



Lower left



4. Measure kink at the top and kink depth:



Adjust the angle measuring tool on the roof window frame so that the cover frame covers the top sufficiently. It is advisable to draw a **marking line** on the rafter or on the insulation foil. Then measure the **plumb angle** at the top.



Measure the **upper tilt angle** (usually 90 degrees) and the **kink depth** with the metre rule.



Measure the **kink depth** incl. groove depth. The measurement gives the depth of the kink on the **visible side inside!**

Measure lining with kink at the top

5. Measure the lower angle:



Place the angle measuring tool on the lower corner. Place the metre rule on the angle to simulate the material thickness.

A: Cover frame on continuous ceiling



Variant A:

Adjust the angle so that the cover frame covers sufficiently.

Leave some distance to the rafter so that the installation can be carried out without problems.

B: Cover frame flush with wall



Variant B:

Adjust the angle until the distance corresponds to the width of the cover frame. In the picture, a frame width of 65 mm was assumed.


Add 5 mm for the rebate of the frame on the inner lining!
Frame width 65 mm = 70 mm
Frame width 80 mm = 85 mm
Frame width 100 mm = 105 mm

Measure lining with kink at the top

6. Measure the width of the cover frame:



Place a spirit level or an angle measuring tool at 90 degrees to the roof window on the inside edge of the roof window groove.

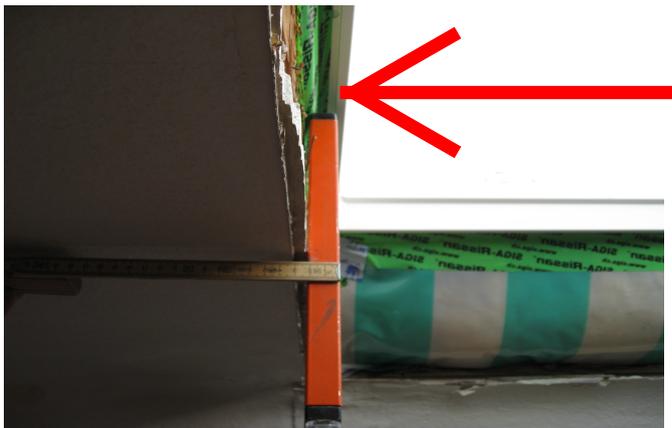

Then measure the frame width from the inner edge of the roof window groove with the metre rule.



The standard widths of our cover frames are 65, 80 and 100 mm.

Special widths up to 250 mm are possible.