



# Measure lining with wedge

For single linings, twin linings and combinations



Die *Premium* Marke  
in Europa 

# Measure lining with wedge

## 1. Measure length (inside dimension):



Place the metre rule on the inner edge of the roof window groove.



Measure the length to the inside edge of the opposite groove (inside dimension).



# Measure lining with wedge

## 2. Measure width (inside dimension):



Place the metre rule on the inner edge of the roof window groove as before.



Measure the width to the inside edge of the opposite groove (inside dimension).



# Measure lining with wedge

## 3. Measure the lining depth:



### Note:

For Velux wedge roof windows, both side parts are 10 mm thick. Wedge linings are only possible in the AquaPro version.

Wedge linings for Roto, Fakro and Braas roof windows remain available unchanged in all finishes.



Place the metre rule at the top from the corner of the roof window groove at **90 degrees to the roof window frame**, then measure the dimension including the groove depth to the front edge of the ceiling.



To compensate for unevenness on the ceiling, subtract approx. 4 mm in the groove from the total lining depth.



Place the metre rule at the bottom from the corner of the roof window groove at **90 degrees to the roof window frame**, then measure the dimension including the groove depth to the front edge of the ceiling.

# Measure lining with wedge

## 4. Measure the angle at the top:



Place the angle measuring tool at the upper corner. Place the metre rule on the angle to simulate the material thickness. Raise the angle so that the cover frame covers sufficiently.



Leave some distance to the rafter so that the installation can be carried out without problems.



Lay the metre rule in the groove to simulate the lining, then measure the angle.

# Measure lining with wedge

## 5. Measure the lower angle:



Place the angle measuring tool on the lower corner. Place the metre rule on the angle to simulate the material thickness.

**A: Cover frame on continuous ceiling**



### **Variant A:**

Adjust the angle so that the cover frame covers sufficiently.

Leave some distance to the rafter so that the installation can be carried out without problems.

**B: Cover frame flush with wall**



### **Variant B:**

Adjust the angle until the distance corresponds to the width of the cover frame. In the picture, a frame width of 65 mm was assumed.


Add 5 mm for the rebate of the frame on the inner lining!  
Frame width 65 mm = 70 mm  
Frame width 80 mm = 85 mm  
Frame width 100 mm = 105 mm

# Measure lining with wedge

## 6. Measure the width of the cover frame:



Place a spirit level or an angle measuring tool at 90 degrees to the roof window on the inside edge of the roof window groove.

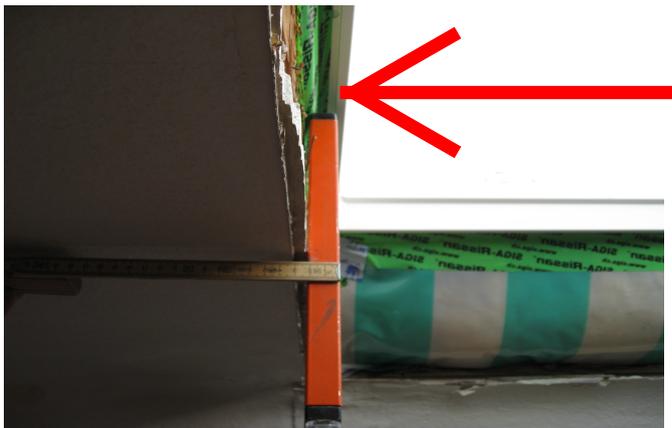

Then measure the frame width from the inner edge of the roof window groove with the metre rule.



The standard widths of our cover frames are 65, 80 and 100 mm.

Special widths up to 250 mm are possible.